



Civil 3D Plan Quantities Using FDOT Takeoff Manager



Randy Roberts
Engineering/CADD Systems Office
Central Office – Tallahassee
randy.roberts@dot.state.fl.us
Phone: 850-414-4896

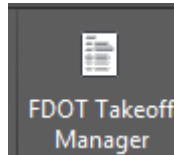

Celebrating 100 Years of Innovation, Mobility and Economic Development

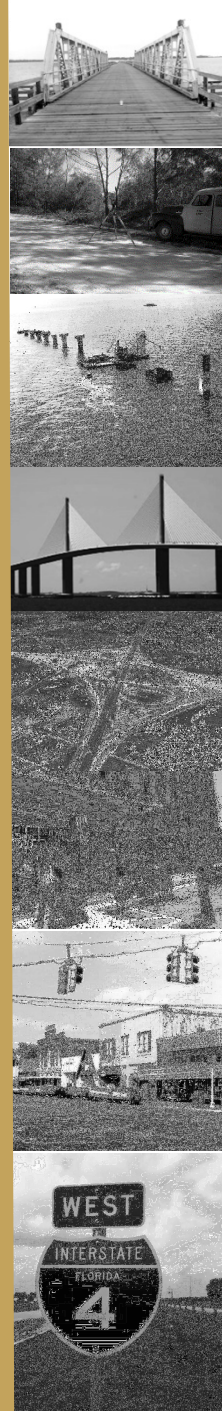

What's New with TO Manager?

A few enhancements were added to the takeoff manager since the initial release.

1. Since Entity Manager added the capability to add alignment association the takeoff manager had to do the same which added a few more options when you run it.

2. Additional Summary Tables added to the list

Summary Table Options


- Summary of Barrier Walls
- Summary of Curb and Traffic Separators
- Summary of Ditch Pavement
- Summary of Driveways
- Summary of Edgedrain
- Summary of Erosion Control
- Summary of Fencing
- Summary of French Drain
- Summary of Guardrail
- Summary of Mailboxes
- Summary of Misc. Asphalt
- Summary of Pavement
- Summary of Performance Turf
- Summary of Permanent Crash Cushions
- Summary of Railing
- Summary of Sidewalk
- Summary of Temporary Crash Cushions
- Summary of Trench Drain
- Summary of Turnouts
- Summary of Underdrain
- Summary of Utility Adjustments

And if this is your first time seeing and using FDOT Takeoff Manager this document will get you started.




Drawing Setup


If this is the first time you are calculating quantities in a drawing file there is initial setup you must perform in each new file or you will run across a error message stating that it can't find items with pay item data attached. The good news is you only have to set this up once in the same file.

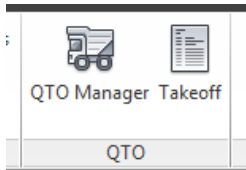


Click on the QTO Manager located on the Analyze Ribbon. If you see no data in the panorama (as seen below) do the following

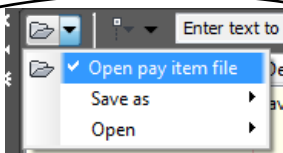



Open Pay Item File and going from top to bottom make the following selections

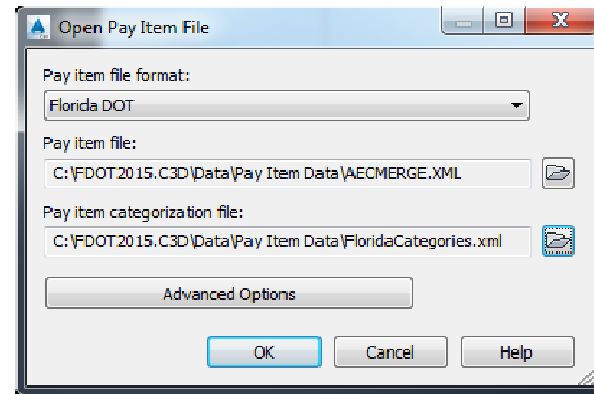

The Interface

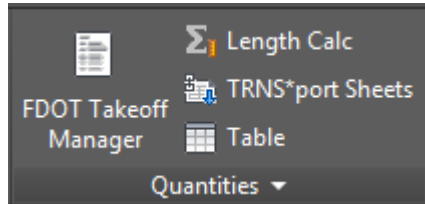

The Takeoff Manager Application Icon is located on the FDOT Ribbon in the Quantities Section. Future reference of Takeoff Manager in this document is TM

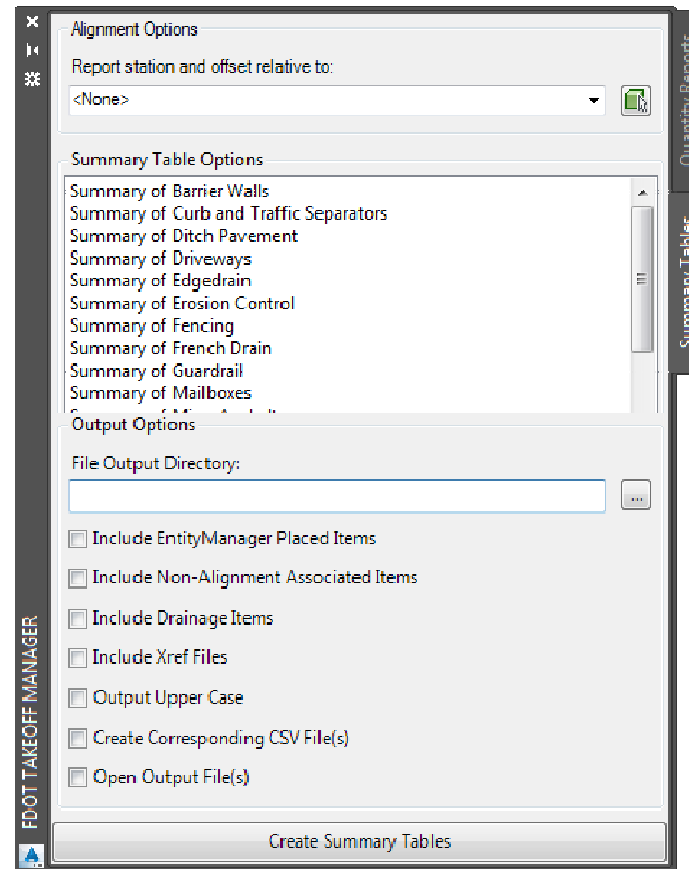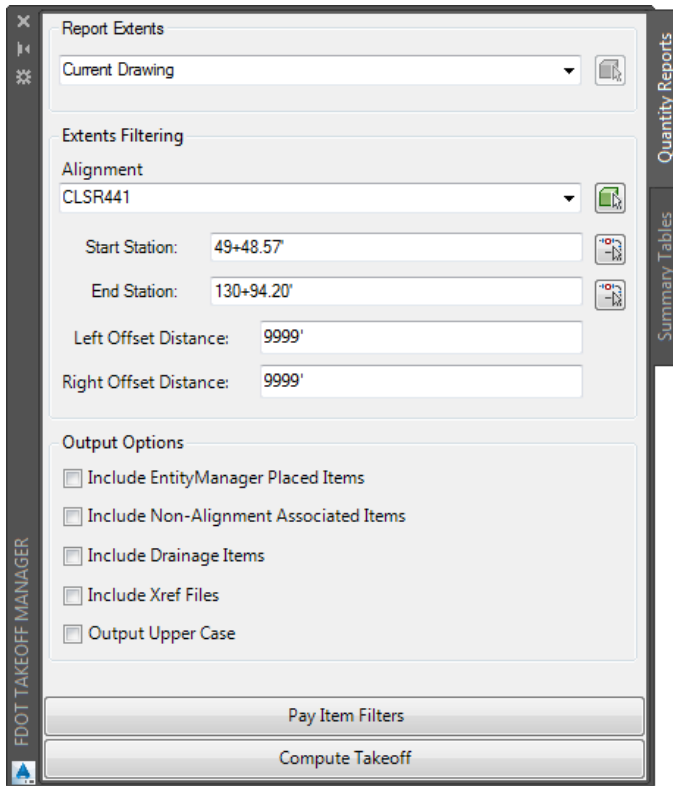

The application dialog box contains 2 tabs “Quantity Reports” and “Summary Tables”
The Dialog behaves like other AutoCAD boxes.
You can allow docking, Auto-hide, etc.



“Quantity Reports” Tab

Report Extents

Current Drawing

Extents Filtering

Alignment

CLSR441

Start Station: 49+48.57

End Station: 130+94.20

Left Offset Distance: 9999'

Right Offset Distance: 9999'

Output Options

☐ Include EntityManager Placed Items

☐ Include Non-Alignment Associated Items

☐ Include Drainage Items

☐ Include Xref Files

☐ Output Upper Case

Pay Item Filters

Compute Takeoff

Report Extents

Current Drawing

Current Drawing


Sheet Extents

The Report Extents controls what you are reporting on. The default is the Current Open Drawing which is everything in the open drawing in Model Space.

If you select Sheet Extents TM will be grayed out and you will be directed to the AutoCAD QTO dialog box where you can get individual sheet quantities. All individual sheet quantities are calculated from match line to match line in each sheet tab. Keep in mind that you can only do one sheet at a time in this mode and you have to click in each sheet tab to make it active to run this feature. When you close the QTO dialog box full functionality returns to TM.



"Quantity Reports" Tab

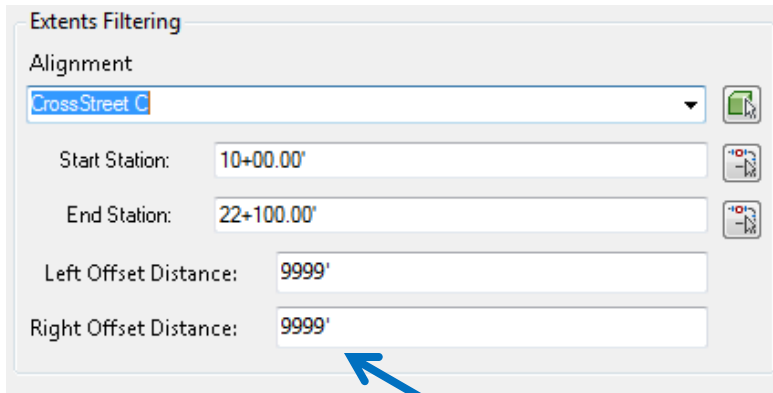


The Extents Filtering dialog box is shown with the following fields:


- Alignment: CrossStreet C
- Start Station: 10+00.00'
- End Station: 22+100.00'
- Left Offset Distance: 9999'
- Right Offset Distance: 9999'


A blue arrow points from the text below to the Right Offset Distance field.

The Extents Filtering allows you to select the Alignment in the drawing that you want to report off of.

You can use the pull down and select from the list of Alignments in the file OR you can pick the select from drawing icon  which will close the box so you can pick it on your screen.

You can control the offset distance by entering a search swath width, which is important if you are reporting off of one specific Alignment among possibly many Alignments.

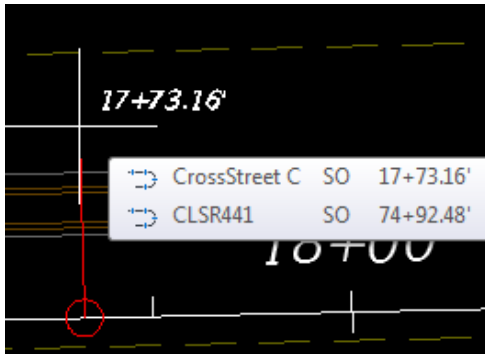

After selecting the Alignment you can either enter a station range or select the pick from drawing icon  which will activate a red jig so you can pick your stations along the selected Alignment. The default is the entire length unless you choose otherwise.



“Quantity Reports” Tab

Include Entity Manager Placed Items –

Reports back only items found that were placed exclusively with EMX (Entity Manager)

Include Non-Alignment Associated Items –

Reports back items that were placed using “Pavement Markings” “FDOT Signs” and “Place Block Group”

Include Drainage Items – Reports back Drainage parts (Structures & Pipes) also any other network items that use part families

Include Xref Files – When selected and you have Xref’s loaded in your current drawing file it will return all objects with pay items found in all Xref’s and current file

Output Upper Case – When selected the report will return in all upper case. If not selected it will return as entered.

When checked the application will report back the following

Output Options

- ☐ Include EntityManager Placed Items
- ☐ Include Non-Alignment Associated Items
- ☐ Include Drainage Items
- ☐ Include Xref Files
- ☐ Output Upper Case

TIP – You can select all that apply, however if you are running quantities from traffic plans and objects with shapes you will want to select option 1 & 2 since some objects would have been placed by both EMX and the other tools mentioned in the descriptions



"Quantity Reports" Tab

Report Extents

Current Drawing

Extents Filtering

Alignment

CLSR441

Start Station: 49+48.57

End Station: 130+94.20

Left Offset Distance: 9999'

Right Offset Distance: 9999'

Output Options

☐ Include Entity/Manager Placed Items

☐ Include Non-Alignment Associated Items

☐ Include Drainage Items

☐ Include Xref Files

☐ Output Upper Case

Pay Item Filters

Compute Takeoff


Pay Item Filters are used if you want to run a report for certain objects only, for example if you had a file with many different object categories and only wanted to know how much Reinforcing Steel was called for you would check the "415" id box in the diagram below and all other pay items would be ignored until you cleared the selection box.

Pay Item Id	Description
101	Mobilization
102	Maintenance of Traffic
104	Erosion Control
110	Clearing and Grubbing
120-175	Excavation, Embankment, and other Earthwork
200-299	Base Courses
300-341	Bituminous Mixtures, Milling, Superpave, Friction Course
346-347	Portland Cement Concrete
350-353	Concrete Pavement
370-370	Bridge Expansion Joints for Concrete
400	Concrete Structures
415	Reinforcing Steel
425-439	Drainage: Inlets, Manholes, Junction Boxes, Trench Drain
440-449	Drainage: Pipes, Underdrain, French Drain, Edgedrain
450-453	Precast, Prestressed Concrete
455	Structures Foundations: Piling, Drilled Shafts


Compute Takeoff launches the process based off of your selections.



“Summary Tables” Tab

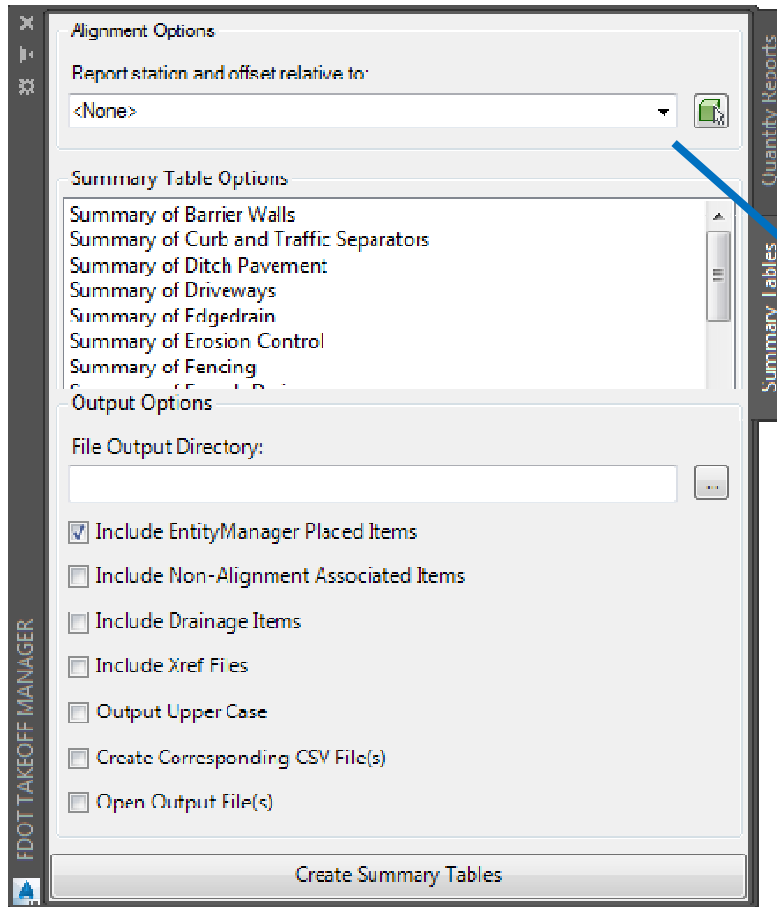

The Alignment Selection Option behaves identical to Alignment selection process on the Quantity Reports tab. It allows you to select the alignment from the list or select it in the drawing.

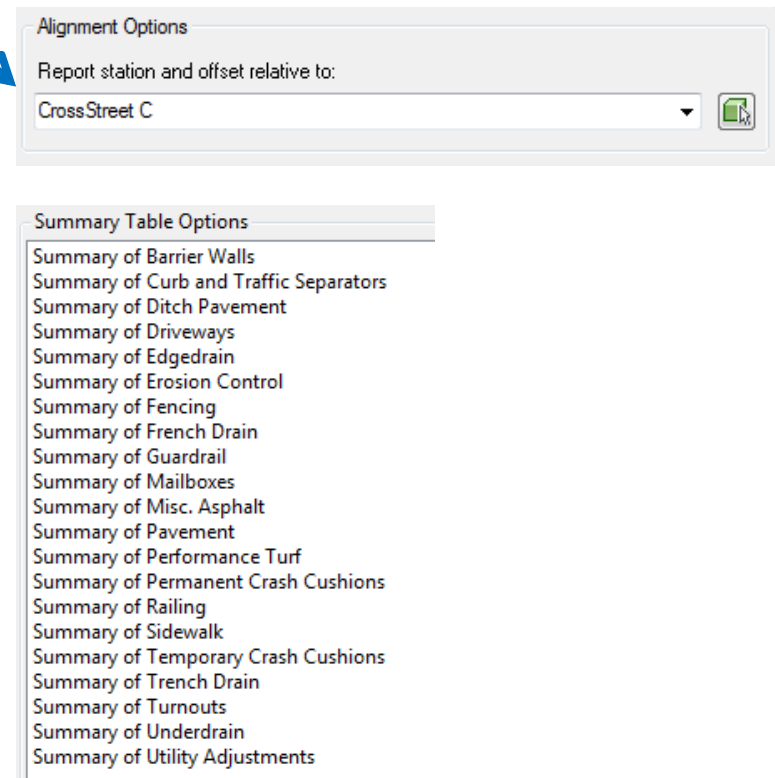

The Summary Table Options contains a list of pre-formatted excel files that will Auto populate when selected and a report generated. You can run multiple reports simultaneously and each will open in its own Excel window



“Summary Tables” Tab

File Output Directory – Allows you to browse the calculations folder in your project where the reports should always go

Include Entity Manager Placed Items – Reports back only items found that were placed exclusively with EMX (Entity Manager)

Include Non-Alignment Associated Items – Reports back items that were placed using “Pavement Markings” “FDOT Signs” and “Place Block Group”

Include Drainage Items – Reports back Drainage parts (Structures & Pipes) also any other network items that use part families

Include Xref Files – When selected and you have Xref’s loaded in your current drawing file it will return all objects with pay items found in all Xref’s and current file

Output Upper Case – When selected the report will return in all upper case. If not selected it will return as entered

Create Corresponding CSV File(s) – In addition to creating an automated report you have an option to create a CSV (excel) file to format and add to other non automated tables

Open Output File(s) - When selected all reports will automatically open upon creation

File Output Directory:

...

☐ Include EntityManager Placed Items

☐ Include Non-Alignment Associated Items


☐ Include Drainage Items

☐ Include Xref Files

☐ Output Upper Case

☐ Create Corresponding CSV File(s)

☐ Open Output File(s)



Create Summary Tables starts the process with all options selected and all Summary Tables that are highlighted



"The Report Interface"

Area Takeoff Manager - Report Viewer

1 of 1 Find | Next

Area Takeoff Report

Pay Item	Description	Object Name	Quantity	Unit	Baseline Alignment	Start Station	End Station	Min Offset	Max Offset
0570 1 2	Performance Turf, Sod		100.76	SY	CrossStreet C				
	Performance Turf, Sod		616.86	SY	CrossStreet C	15+20.10'	17+47.72'	.01 LT	19.97 LT
		Quantity Total:	717.62						

Page # 1

Select Report Type: Area Takeoff Report Create TRANSPORT File

Before we take a look at the actual report lets look at the anatomy of the report viewer itself



Scroll
Navigational
buttons for Multi
page reports

Refresh
Report


Print
Report

Print
Preview

HINT- If you seem to be stuck in Layout or Preview mode click the same Icon again to exit that mode.


Page
Setup

Save As Mode

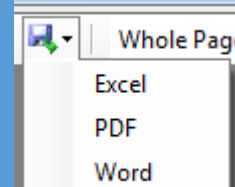

Search Report for
Keywords

Quick Zoom
Feature

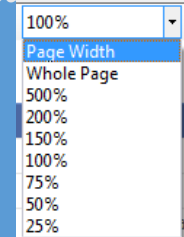

"The Report Interface"

FDOT Takeoff Manager - Report Viewer

1 of 1 Find Next

Area Takeoff Report

Pay Item	Description	Object Name	Quantity	Unit	Baseline Alignment	Start Station	End Station	Min Offset	Max Offset
0570 1 2	Performance Turf, Sod		100.76	SY	CrossStreet C				
	Performance Turf, Sod		616.86	SY	CrossStreet C	15+20.10'	17+47.72'	.01 LT	19.97 LT
Quantity Total:			717.62						

Page # 1

Select Report Type: Area Takeoff Report Create TRANS*PORT File

If you run a report and it comes up blank It may be due to the incorrect Report Type selected.

Select Report Type:

- Area Takeoff Report
- Area Takeoff Report
- Count Takeoff Report
- Linear Takeoff Report
- Volume Takeoff Report

There are four Report Types to Choose from. Area, Count, Linear, & Volume. Each Pay Item has a formula attached that determines which Category it falls into.

TRANS*PORT Interface to Generate Reports

Create TRANS*PORT Upload File

TRANS*PORT XML Input File

Exported Project Header XML File

Project Name

Project Number

Description

Default Unit System Spec Book Version

TRANS*PORT XML Output File

Output File Location:

Create Upload File



“The Report Interface”

Pay Item Column

Description of Pay Item

Quantity based on attached Formula

Unit of Measure

Minimum and Maximum Offset Distances from Alignment

Referenced Alignment

Beginning and Ending Station

Area Takeoff Report

Pay Item	Description	Object Name	Quantity	Unit	Baseline Alignment	Start Station	End Station	Min Offset	Max Offset
0570 1 2	Performance Turf, Sod		100.76	SY	CrossStreet C				
	Performance Turf, Sod		616.86	SY	CrossStreet C	15+20.10'	17+47.72'	.01 LT	19.97 LT
Quantity Total:			717.62						

Page # 1

Select Report Type: Area Takeoff Report


Create TRNS'PORT File

In this example we have a Area report showing performance Turf, Sod using the “Quantity Reports” tab.

From here we can save it to a Excel, Word, or a PDF file for further editing.



“Summary Table Report”

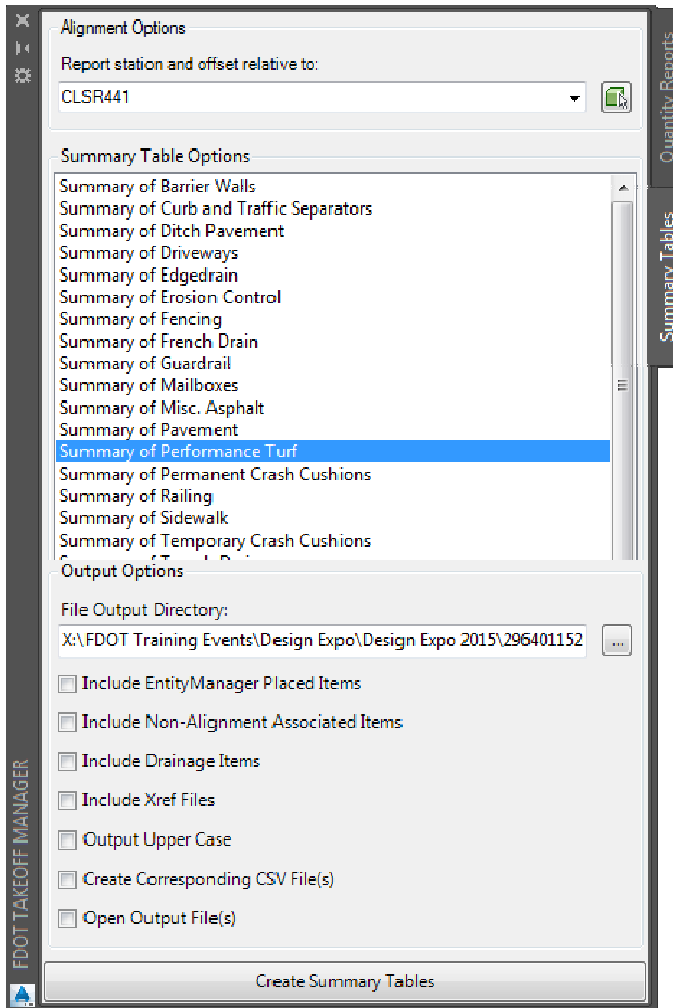


Let's run the same report, but with the Automated Summary Tables. Do the following.

- Select an Alignment
- Select the desired Summary Table
- Designate the Output Directory for the file
- Select open Output File
- Click the Create Summary Tables button

Let's look at what is happening behind the curtain.


FDOT2015.C3D ▶ Data ▶ Templates ▶ XLSX ▶ Summary Reports

In your install directory there is a folder that contains all of the XLS files and corresponding XML files.

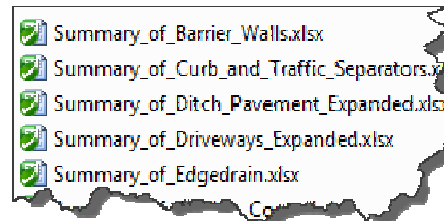

When you run the “Create Summary Tables” button the application finds the corresponding XML file to see what pay item numbers match, then it puts them into the correct column in the target Excel file.





	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
1	SUMMARY OF PERFORMANCE TURF														
2	LOCATION			SIDE	AREA ID	LENGTH	WIDTH	PERFORMANCE TURF		PERFORMANCE TURF (SOD)		PREPARED SOIL LAYER		DESIGN NOTES	CONSTRUCTION REMARKS
3								0570 1 1		0570 1 2		0162 1 11			
4	STA. TO STA.							SY		SY		SY			
5								P	F	P	F	P	F		
6															
7		to		RT	48A3					100.8					
8	15+20.10	to	17+47.72	LT/RT	4ASF					616.9					
9															
10															
11															
12															
13															
14															
15															
16															
17															
18															
19															
20															
21															
22															
23															
24															
25															
26															
27	SUB-TOTAL:									718					
28	TOTAL:									718					

“Automated Report”


AREA ID	LEN
48A3	
4A5F	

What’s with that Area ID Info on my Report??

EVERY object that is drawn in AutoCAD has a unique handle assigned to it that never changes as long as that object isn’t deleted and re drawn.

HINT- To see a list of these neat things type in “SUPERLIST” on the command line.

```
Autodesk.AutoCAD.DatabaseServices.Extents3d
GradientAngle: 0: System.Double
GradientName: LINEAR: System.String
GradientOneColorMode: False: System.Boolean
GradientShift: 0: System.Single
GradientType: PreDefinedGradient Autodesk.AutoCAD.DatabaseServices.GradientPatternType
Handle: 4A5F: Autodesk.AutoCAD.DatabaseServices.Handle
HasFields: False: System.Boolean
HasSaveVersionOverride: False: System.Boolean
HatchObject: HatchObject Autodesk.AutoCAD.DatabaseServices.HatchObjectType
HatchStyle: Outer: Autodesk.AutoCAD.DatabaseServices.HatchStyle
Hyperlinks: Autodesk.AutoCAD.DatabaseServices.HyperLinkCollection:
Autodesk.AutoCAD.DatabaseServices.HyperLinkCollection
Id: (8796085893488): Autodesk.AutoCAD.DatabaseServices.ObjectId
```

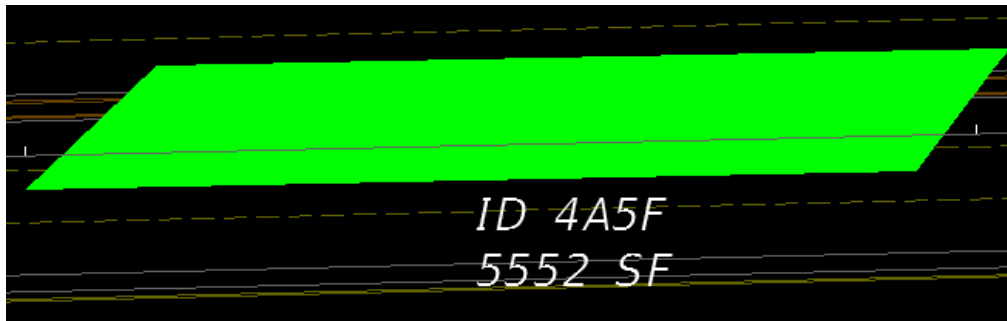

Refer to my Handout on Entity Manager for more information regarding the application



“Linking Report”


Lets go over the options to bring in the “Summary of Fencing” Report. There are two different options to bring it in. They are listed in order of preferred method.

- Option One- Link direct from Excel
- Option Two- Link the Excel Cells to a Pre-formatted AutoCAD Table


SUMMARY OF FENCING						
PAY ITEM NO.	DESCRIPTION	LOCATION		SIDE	UNIT	QUANTITY
		STA. TO STA.				P
0550 10150	Fencing, Type A, 8.1- 10.0' Height, Standard	10+23.53'	to 17+50.25'	RT	LF	726.8
		20+09.66'	to 20+09.66'	LT		782.8

Let's do Option One first. Above you can see the Auto-populated Fencing summary as it appears in Excel.



On the FDOT ribbon pick the Table Icon.

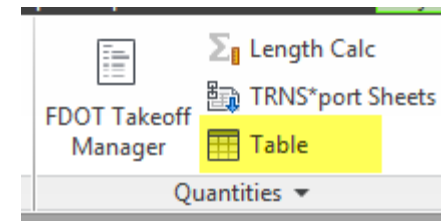

“Linking Report”

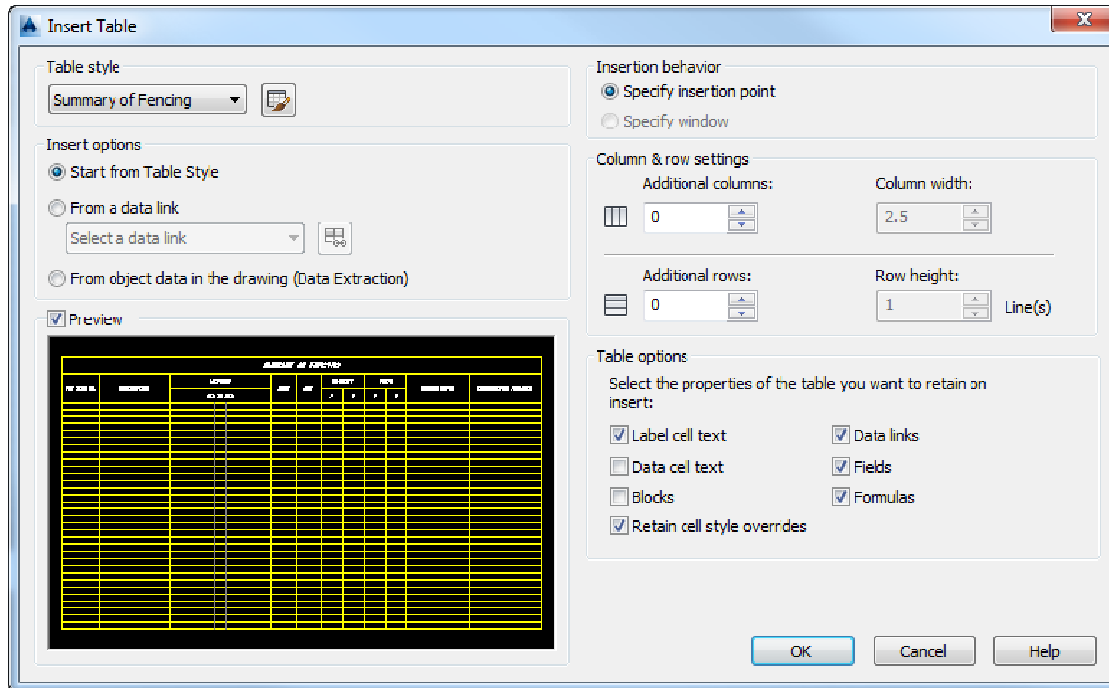


The Insert Table Dialog box opens. Since we want to do Option one select the “From a Data Link” and select the Data Link Manager icon that is highlighted below.

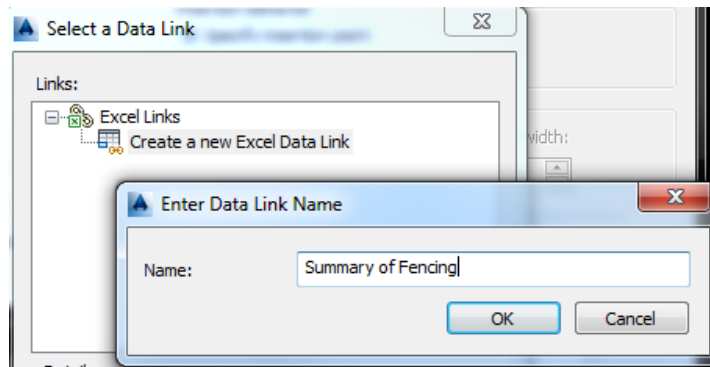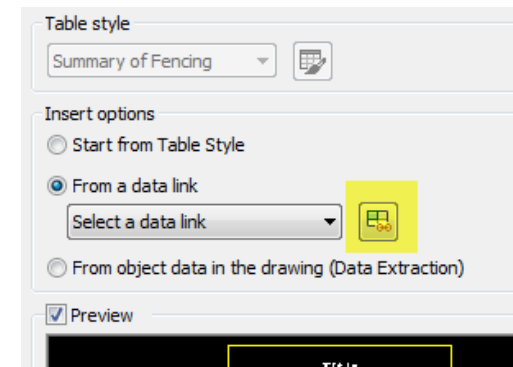



We want to create a new Data link so select “Create a new Excel Data Link” and name it appropriately.



“Linking Report”

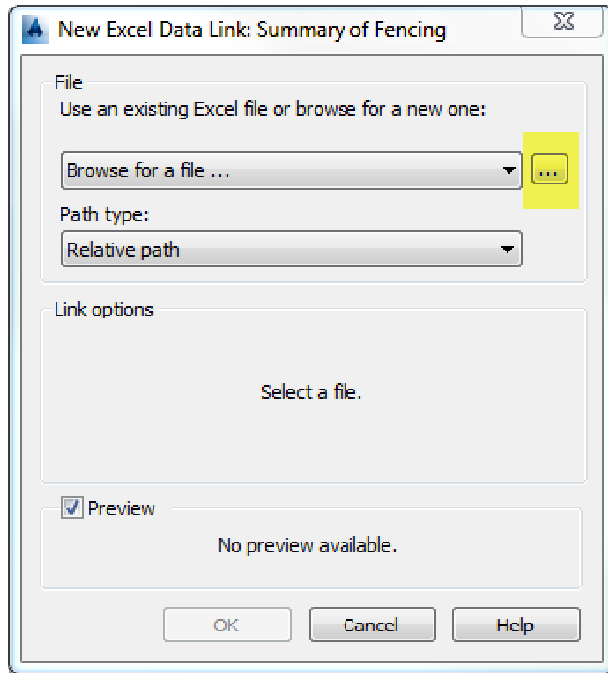

Select the “Browse for a File” Ellipses button. Browse to the appropriate calculations folder within your project folder where you saved the initial Report

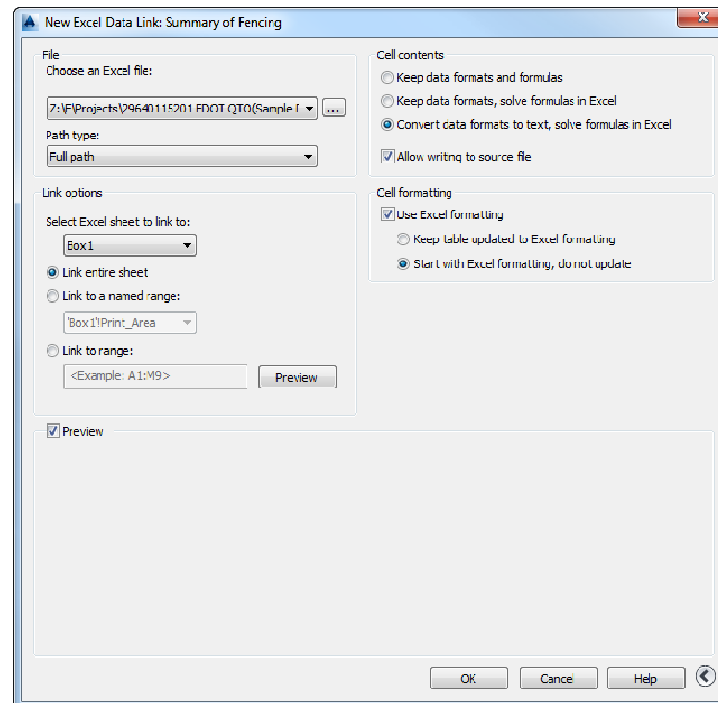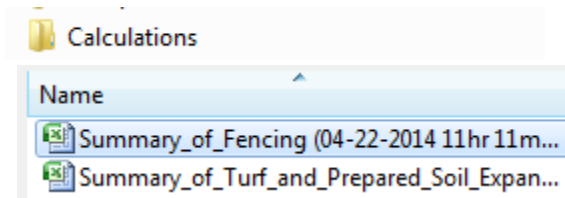

As you can see the dialog box fills in with the info you have selected.

At this point select OK.



“Linking Report”

SUMMARY OF FENCING								
LOCATION			SIDE	UNIT	QUANTITY		TOTAL	
STA. TO STA.					P	F	P	F
10+23.53'	t o	17+50.25'	RT	LF	726.8		1510	

Upon first glance it needs a little adjustment to look correct.

C	D	E	F	G	H	I
SUMMARY OF FENCING						
LOCATION			SIDE	UNIT	QUANTITY	
STA. TO STA.					P	F
10+23.53'	t o	17+50.25'	RT	LF	726.8	
20+09.66'	t o	20+09.66'	LT		782.8	

To fix the above image select inside of the cell to highlight it. Using the top or bottom square grip expand the cell so the text will shift to its correct placement.

SUMMARY OF FENCING								
LOCATION		SIDE	UNIT	QUANTITY		TOTAL		
STA. TO STA.				P	F	P	F	
10+23.53'	t o	17+50.25'	RT	LF	726.8		1510	

Select the entire table. Be careful to select the border instead of inside a cell. Click in the Arrowhead Grip and move it in to fit inside your sheet border.


C	D	E	F	G	H	I	J	K
SUMMARY OF FENCING								
LOCATION			SIDE	UNIT	QUANTITY		TOTAL	
STA. TO STA.					P	F	P	F
10+23.53'	t o	17+50.25'			RT	LF	726.8	
20+09.66'	t o	20+09.66'	LT		782.8			



“Linking Report”

All of the Tables now reside in the fdotmaster template, which means when you create new files they will already be loaded.


However In the event the AutoCAD Tables are not in your file do the following steps

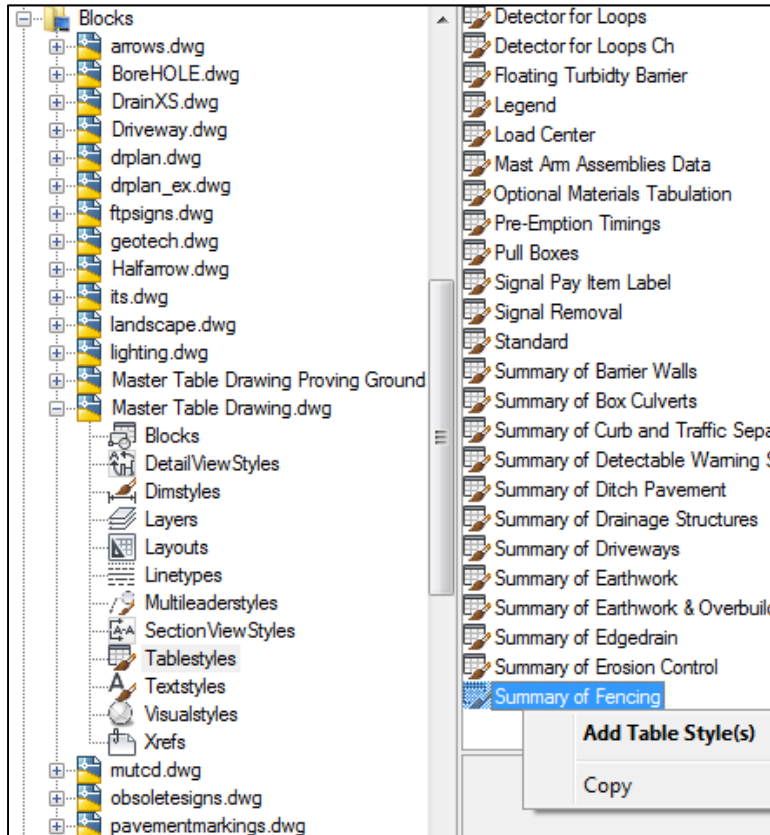

To begin with lets make sure you have the proper Table in your Drawing. Type “DC” on the command line to launch “Design Center” Within Design Center browse to the Blocks folder in the State Kit install Directory

C:\FDOT2015.C3D\Data\Blocks


Expand the “Master Table Drawing” and select Tablestyles. Right click on the desired table name and select “Add Table Style”

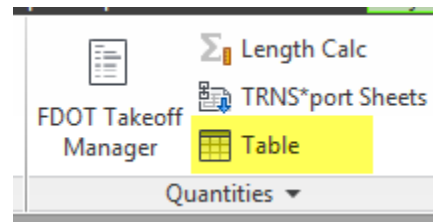

Now you are ready. Select the “Table” Icon again.



“Linking Report”

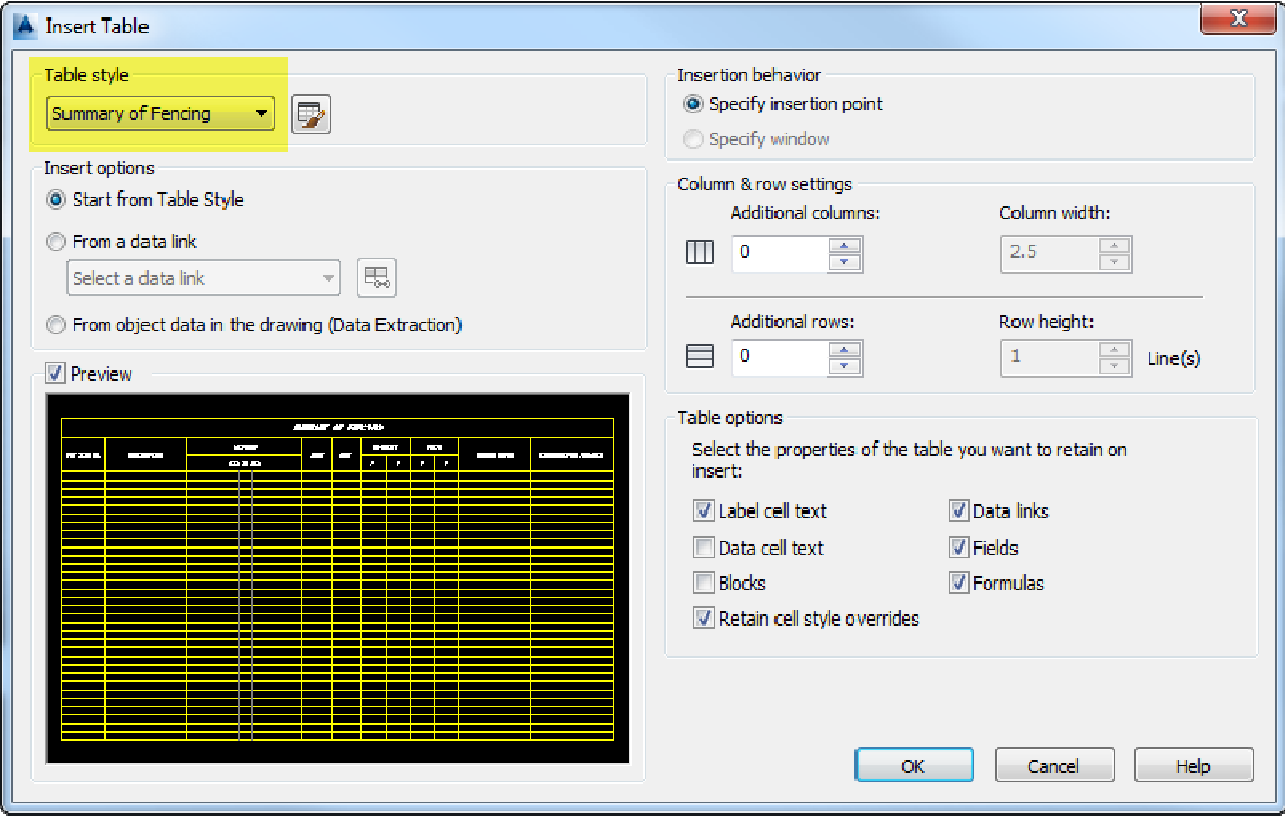

When the “Insert Table” dialog box comes up select the “Table Style” pull down to select the desired table in this case “Summary of Fencing”.

Make sure you match the selections in the lower right corner in the Table Options section.

Select "OK"





“Linking Report”


1	
2	
3	PAY ITEM NO.
4	
5	
6	
7	

With Table now inserted select the first cell where data will go.

The Table Contextual ribbon appears. Select “Link Cell”

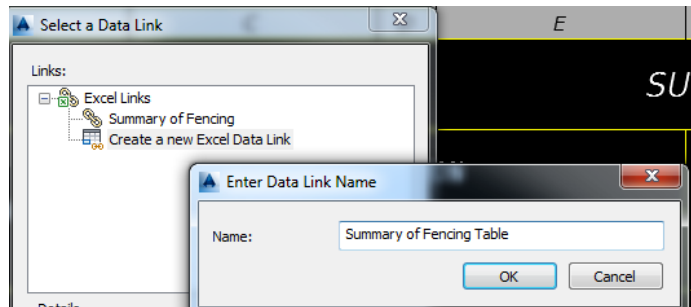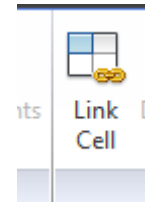

Create a new Excel Data Link. Browse to the report location as before then Select the “Link To Range” It is important to pick the exact Range in the Excel file so it will match the Table.

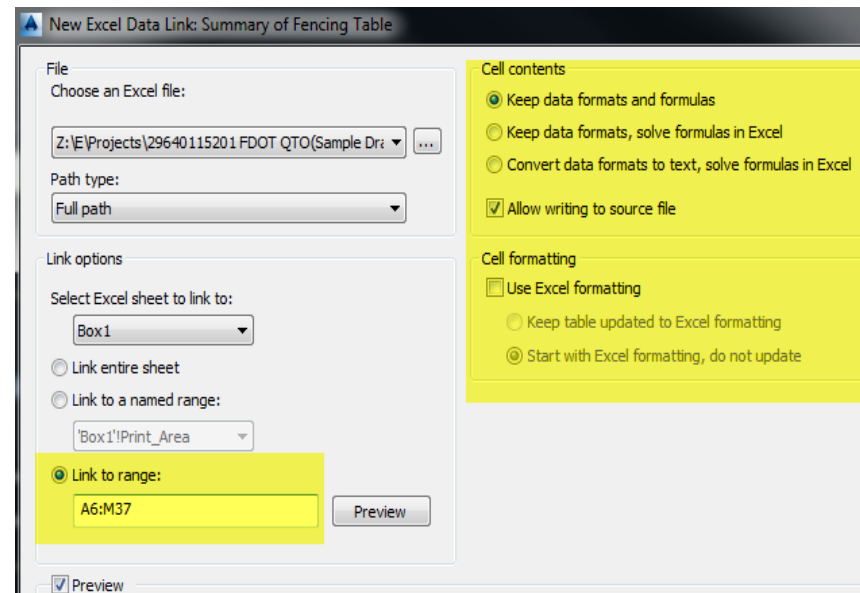

Don't pick the column headers, just where the data begins (Ex. From above A6)



“Linking Report”

SUMMARY OF FENCING								
PAY ITEM NO.	DESCRIPTION	LOCATION			SIDE	UNIT	QUANTITY	
		STA. TO STA.					P	
0550 10150	Fencing, Type A, 8.1- 10.0' Height, Standard	10+23.53'	E O	17+50.25'	RT	LF	726.8	
		20+09.66'	E O	20+09.66'	LT		762.8	

SUMMARY OF FENCING								
PAY ITEM NO.	DESCRIPTION	LOCATION			SIDE	UNIT	QUANT.	
		STA. TO STA.					P	
0550 10150	Fencing, Type A, 8.1 - 10.0' Height, Standard	10+23.93'	to	17+50.25'	RT	LF	726.8	
		20+09.66'	to	20+09.66'	LT		762.8	

As you can see the visual differences are minimal between the two options. You can still edit the cells in both as far as size goes. Depending on the table you use you can also break the link in the AutoCAD Table option and manually enter data and formulas if you need a quick edit.



“Part Two”

“Miscellaneous Edits”



“Editing a Table”

Insert Table

Table style
Summary of Removal Items

Insert options
☒ Start from Table Style
☐ From a data link
Select a data link
☐ From object data in the drawing (Data Extraction)

☒ Preview

Preview

Insertion behavior
☒ Specify insertion point
☐ Specify window

Column & row settings
Additional columns: 0
Column width: 2.5
Additional rows: 0
Row height: 1 Line(s)

Table options
Select the properties of the table you want to retain on insert:
☒ Label cell text
☐ Data cell text
☐ Blocks
☒ Retain cell style overrides
☒ Data links
☒ Fields
☒ Formulas

OK Cancel Help

Click on the “Table” Icon and insert the “Summary of Removal Items” make sure you are in Paper Space in your current Tab.



“Editing a Table”

SECONDARY UNITS (IF LUM)			
AREA			L
LENGTH	WIDTH	SF/SY/AC	
24.00	36.00	=i6*j6]	
24.00	36.00		
24.00	36.00		

Adding a Formula

You can type a formula in a cell like Excel. In this example we are adding a Square Footage formula.

SECONDARY UNITS (IF LU			
AREA			
LENGTH	WIDTH	SF/SY/AC	
24.00	36.00	864.00	
24.00	36.00	=i6*j6/9	
24.00	36.00		


In this example we are typing a Square Yardage formula.

SECONDARY UNITS (IF LU			
AREA			
LENGTH	WIDTH	SF/SY/AC	
24.00	36.00	864.00	
24.00	36.00	96.00	
24.00	36.00	=i6*j6/4 3560	





In this example we are typing a Acreage formula.



“Editing a Table”

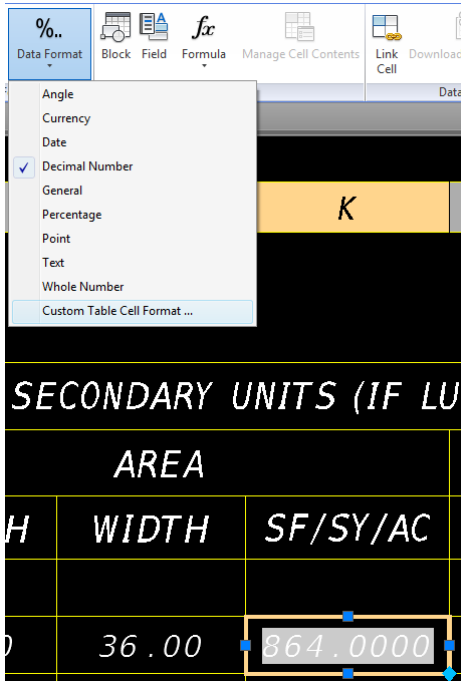

You can change the precision by selecting the “Data Format” > “Decimal Number” > “Custom Table Cell Format”

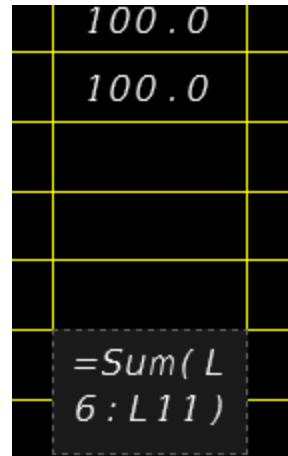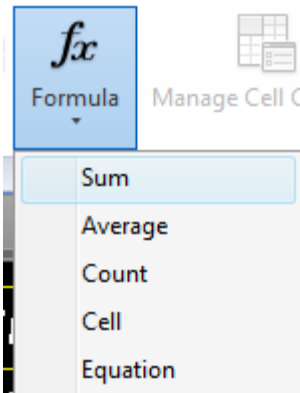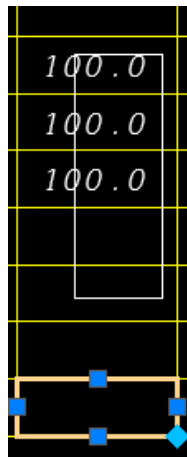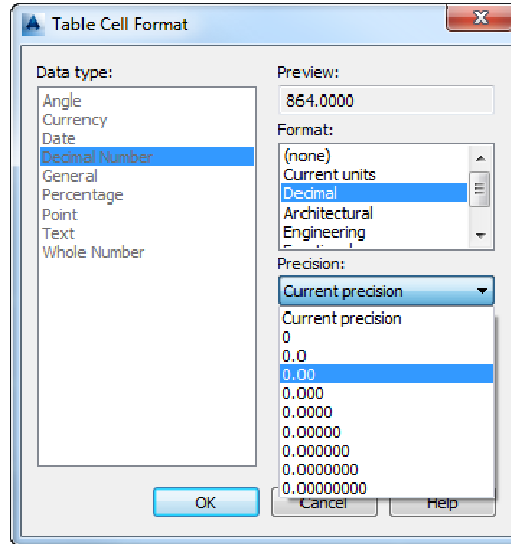


To add a “SUM” Equation to your table select the Target Cell. On the ribbon select SUM on the Formula Pull-down. Left click your mouse in the top of your cell range it will go into a window feature and then left click on the bottom of your cell range. You should see the formula populate your target cell at this point. Press Enter to complete the process



“Editing an Excel File”

The below example is of the Summary of Guardrail report. It contains numerous columns that will not fit in a typical FDOT 11x17 sheet. The reason is due to each column containing every Pay Item scenario using guardrail. After running the report you will need to delete the unused columns.

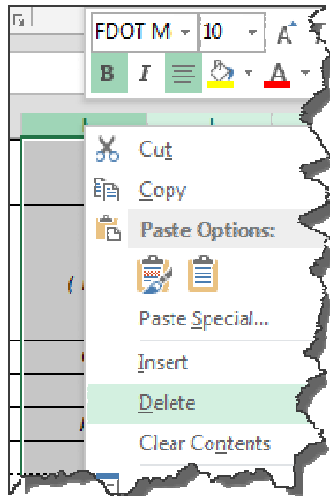[illegible]

Select the columns in Excel >Right Click and select Delete. You will need to do these steps on several of the tables in Excel before you bring them into your drawing.

